



CALCULO DE CALIBRE DE LAMINAS RECOMENDADO X ZONAS EOLICAS

Ancho mts	VEL.VIENTO 60 KM/H ZONA EOLICA :			VEL.VIENTO 80 KM/H ZONA EOLICA :			VEL.VIENTO 100 KM/H ZONA EOLICA :			VEL.VIENTO 120 KM/H ZONA EOLICA :			VEL.VIENTO 130 KM/H ZONA EOLICA :		
	1			2			3			4			5		
	20%	35%	50%	20%	35%	50%	20%	35%	50%	20%	35%	50%	20%	35%	50%
9	25	24	22	25	24	22	25	24	22	24	22	20	22	22	18
10	25	24	22	25	24	22	25	24	22	24	22	20	22	22	18
11	25	24	22	25	24	22	25	24	22	24	22	20	22	22	18
12	25	24	22	25	24	22	25	24	22	24	22	20	22	22	18
13	25	24	22	25	24	22	25	24	22	24	22	20	22	22	18
14	25	24	22	25	24	22	25	24	22	24	22	20	22	22	18
15	25	24	22	25	24	22	25	24	22	22	22	20	22	20	18
16	25	24	22	25	24	22	24	22	22	22	22	18	22	20	18
17	25	24	22	25	24	22	24	22	20	22	20	18	22	20	18
18	25	24	22	25	24	22	24	22	20	22	20	18	22	20	16
19	24	22	22	24	22	22	24	22	20	22	20	18	22	18	16
20	24	22	20	24	22	20	24	22	20	22	20	18	20	18	16
21	24	22	20	24	22	20	24	22	20	22	18	16	20	18	16
22	24	22	20	24	22	20	24	22	18	22	18	16	20	18	-
23	24	22	20	24	22	20	22	20	18	20	18	-	20	18	-
24	24	22	18	24	22	18	22	20	18	20	18	-	20	16	-
25	24	22	18	24	22	18	22	20	18	20	18	-	18	16	-
26	24	22	18	24	22	18	22	20	16	20	16	-	18	16	-
27	22	20	18	22	20	18	22	20	16	20	16	-	18	16	-
28	22	20	18	22	20	18	22	18	16	18	16	-	18	-	-
29	22	20	18	22	20	18	22	18	16	18	16	-	18	-	-
30	22	20	16	22	20	16	22	18	16	18	16	-	18	-	-
31	22	20	16	22	20	16	22	18	16	18	-	-	16	-	-
32	22	20	16	22	20	16	20	18	-	18	-	-	-	-	-
33	22	18	16	22	18	16	20	18	-	16	-	-	-	-	-
34	22	18	16	22	18	16	20	16	-	16	-	-	-	-	-
35	22	18	16	22	18	16	20	16	-	16	-	-	-	-	-

